

<b>Product:</b> PLASMA TV	<b>Models:</b> TH42PX600 TH42PX60	<b>Number:</b> TT-08-15
<b>Code:</b> B62		<b>Date:</b> February 26, 2008
<b>Model Year:</b> 2006		

**PCB Designation:** P Board

**Part #:** TXN/P1BFTUS & TXN/P1BJTUS

**Symptom:** Shuts down with power LED 10 blinks.

**Cause:** Missing 395Vdc output due to shorted Q412 & Q413 and open PR401.



**Remedy:** Replace Q412, Q413, PR401 & check/replace Q408 and Q409.

Note: Always confirm condition of Q408 & Q409, in some cases could be shorted.

### Parts list

1. Q412 & Q413:

Part # - B1DEGQ000070

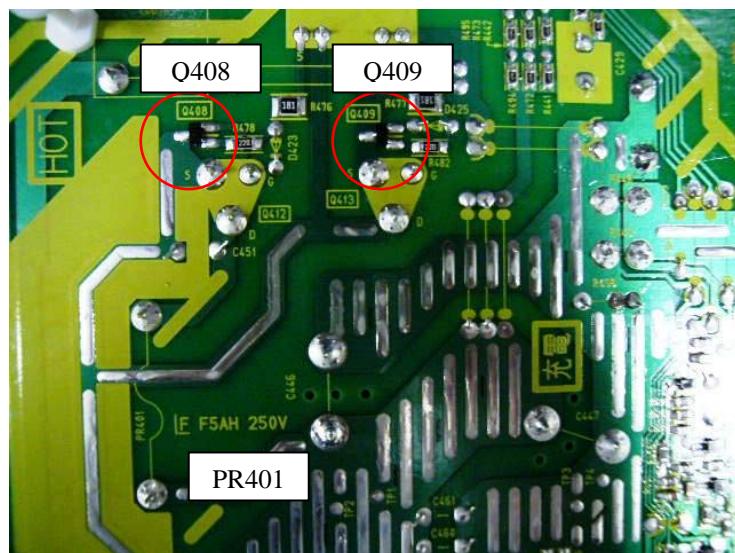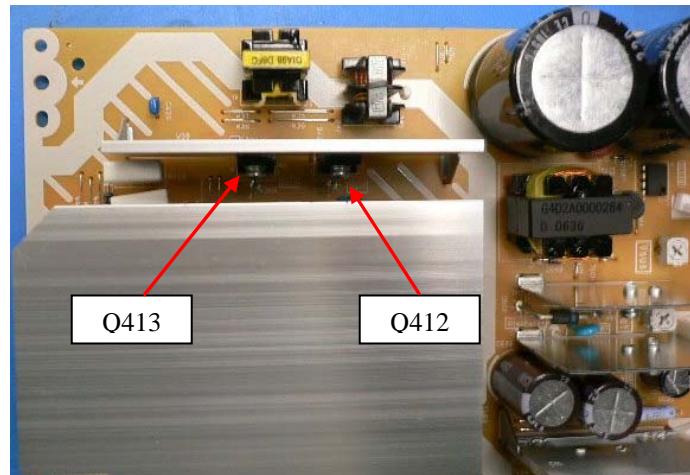

### Parts list

2. Q408 & Q409:

Part # - B1DHCD000034

3. PR401:

Part # - K5Y502BA0001